

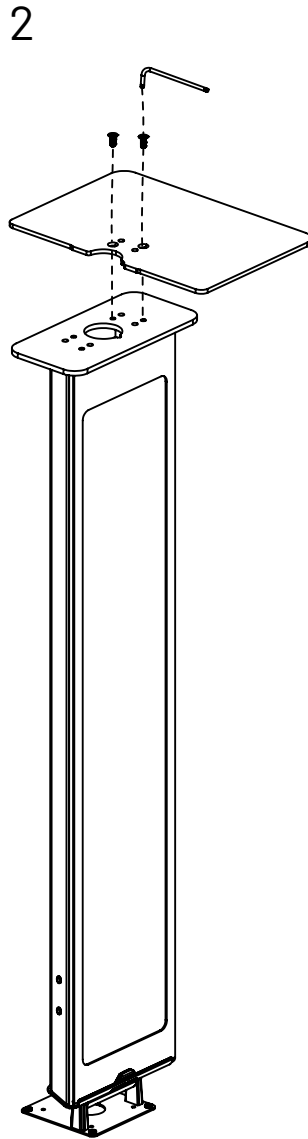


## Assembly Instructions


1 TIGHTEN VESA MOUNTING PLATE AT 90°

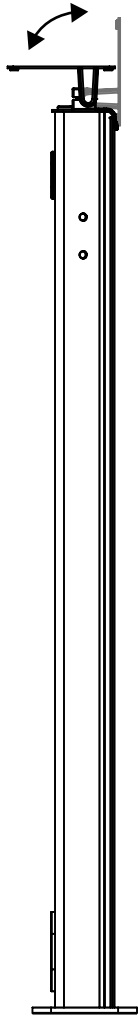


INVERT BRANDME TO STAND ON THE VESA MOUNTING PLATE AND INSTALL ONE BASE PLATE (L to L OR R to R) TO THE BOTTOM PLATE USING 2 x M6x14mm FLATHEAD SCREWS & TIGHTEN USING T-30 TORX SCREWDRIVER (SUPLLED WITH BRANDME STAND)

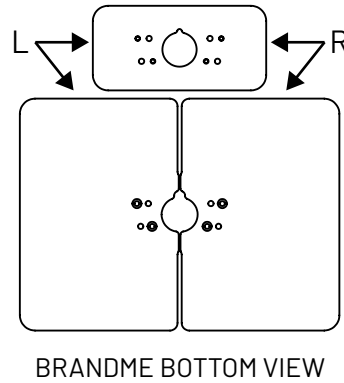

3 LAY BRANDME ON THE FLOOR/FLAT SURFACE AND INSTALL THE SECOND BASE PLATE (L to L OR R to R) USING 2 x M6x14mm FLATHEAD SCREWS & TIGHTEN USING T-30 TORX SCREWDRIVER (SUPLLED WITH BRANDME STAND)

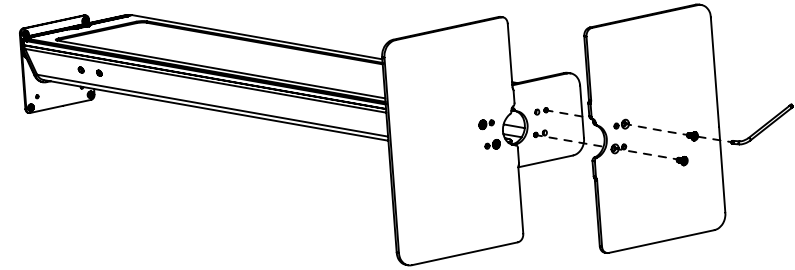


4 RETURN BRANDME TO UPRIGHT AND READJUST VESA MOUNTING PLATE

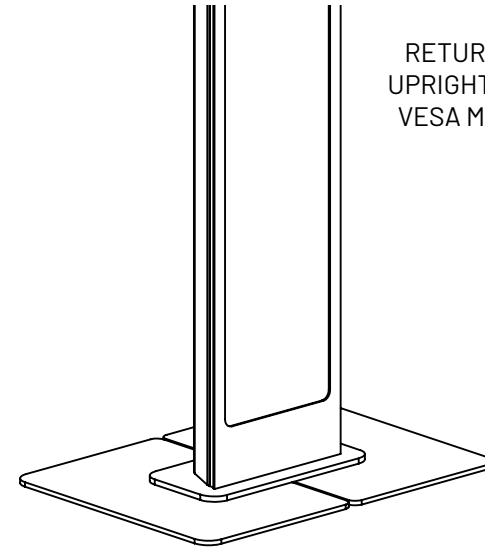

In The Box



Left Base Plate



Right Base Plate